


MARKERS #74 DRILL FOR OUTER HOLES .108" C+O #60
 DRILL AT CENTER. I USED X-ACTO KNIFE W/ #15 BLADE TO
 SHAPE OPENING. PLACE MARKERS IN BODY - THEY ARE TOO NARROW -
 USE A .100 X .188 X .188 STYRENE BLOCK MARKER LEGS AND
 FORCE DOWN TO STOP WITH PLIERS. THIS WILL SPREAD MARKERS
 WINDOWS CUT PLASTIC SIDES TO MATCH WINDOW OPENINGS
 IN BRASS CAL SIDES OPENING. INSERT INDIVIDUAL KATO DINER
 WINDOWS IN EACH WINDOW OPENING. THEY ARE EASY TO REMOVE
 FROM STRIP. SCRIBE TWO VERTICAL CUTS AT WINDOW FRAME
 AND SNAP HORIZONTAL CUT, USE LONG NOSE PLIERS AND
 BUTT UP AGAINST FRAME AND BRAKE OFF, THEY ARE
 VERY THIN @ THIS POINT. ONE SMALL WINDOW YOU WILL
 HAVE TO FABRICATE BY CUTTING VERTICAL JAMB W/ NO
 GLASS AND ADD TO WINDOW GLASS CUT DOWN. VESTIBULE
 WINDOW IS FROM THE DOME COACH WINDOW SET.

TAIL SIGN

MAKE FROM .030 AND .060 SHEETS OF CLEAR
 POLYESTER SHEETS - I USED 'MIDWEST PRODUCTS'. IT COMES
 WITH A PROTECTIVE COVER, AFTER

MADE REMOVE PROTECTIVE COVER,
 MASK, AND I SPRAYED W/
 FLOQUIL 'BRIGHT SILVER'

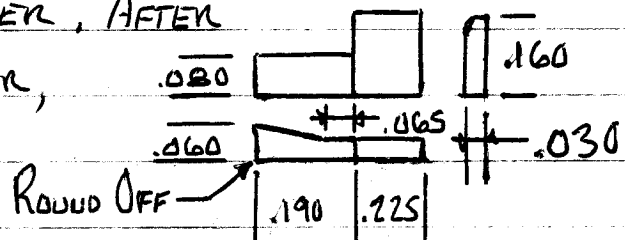

CYRALIGHT

I MILLED W/ ROUND END MILL. PROBABLY COULD USE .060
 DRILL AND CUT DOWN TO IT.